

SC-9101-8P-W

Zigbee 3.0 Wandschalter

1 - 4 Schalter, weiss



Eigenschaften / Features

ZigBee Dimm-Fernbedienung basierend auf ZigBee 3.0

Unterstützt den Find- und Bindemodus zur Kopplung mit ZigBee-Beleuchtungsgeräten

Ermöglicht die Steuerung einfarbiger Beleuchtungsgeräte

Batteriebetriebene Fernbedienung mit niedrigem Stromverbrauch

Ermöglicht die Kopplung von ZigBee-Beleuchtungsgeräten über Touchlink-Inbetriebnahme ohne Koordinator

Unterstützt 4 Gruppen für die Verbindung von max. 30 Beleuchtungsgeräte

2,4 GHz globaler Betrieb

Übertragungsbereich bis zu 30 m

Kompatibel mit universellen ZigBee-Gateway-Produkten

Kompatibel mit universellen einfarbigen ZigBee-Beleuchtungsgeräten

Frontplatte kann durch 4-Tasten- oder 2-Tasten-Frontplatte ersetzt werden

5 Jahre Garantie

ZigBee dim remote based on ZigBee 3.0

Supports find and bind mode to pair with ZigBee lighting devices

Enables to control single color lighting devices

Battery powered remote with low power consumption

Enables to pair ZigBee lighting devices via touchlink commissioning without coordinator

Supports 4 groups for binding max. 30 lighting devices

2.4 GHz global operation

Transmission range up to 30m

Compatible with universal ZigBee Gateway products

Compatible with universal single color ZigBee lighting devices

Front plate can be replaced with 4-key or 2-key front plate

5 years warranty

Technische Daten / Technical Data

Product Data	Operation Frequency	2.4 GHz
	Transmission Range	30 m
	Power Supply	3 VDC (CR2450)
	Operating temperature	0-40°C
	Relative humidity	8% to 80%
	Dimming Range	0.1% - 100%
	Dimensions	86.0x86.0x15.2 mm
	Protection Type	IP20

ZigBee Clusters Supported by This Remote Are As Follows:

Input clusters:

- Basic • Power Configuration • Identify • Diagnostics

Output clusters:

- Identify • Group • On/off • Level control • Ota

Safety & Warnings

This device contains a button lithium battery that shall be stored and disposed properly.

DO NOT expose the device to moisture.

Do not ingest battery, Chemical Burn Hazard

This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention

Sicherheit & Warnhinweise

Dieses Gerät enthält eine Lithium-Knopfbatterie, die ordnungsgemäß gelagert und entsorgt werden muss.

Setzen Sie das Gerät NICHT der Feuchtigkeit aus.

Batterie nicht verschlucken, Verätzungsgefahr

Dieses Produkt enthält eine Knopfzellenbatterie. Wenn die Knopfzellenbatterie verschluckt wird, kann sie innerhalb von nur 2 Stunden schwere innere Verbrennungen verursachen, die zum Tod führen können.

Halten Sie neue und gebrauchte Batterien von Kindern fern.

Wenn sich das Batteriefach nicht sicher schließen lässt, verwenden Sie das Produkt nicht mehr und halten Sie es von Kindern fern. von Kindern fern.

Wenn Sie glauben, dass Batterien verschluckt oder in einen Körperteil eingedrungen sein könnten, suchen Sie sofortige ärztliche Hilfe

Operation


1. This ZigBee Dim remote is a wireless transmitter that communicates with a variety of ZigBee compatible systems. This transmitter sends wireless radio signals that are used to remotely control a compatible system.

2. This ZigBee remote supports 4 groups for binding max. 30 lighting devices and enables to control single color ZigBee lighting devices.

3. Zigbee Network Pairing through Coordinator or Hub (Added to a Zigbee Network)

Step 1: Remove the remote from previous zigbee network if it has already been added to it, otherwise pairing will fail. Please refer to the part "Factory Reset Manually".

Step 3: Short press the commissioning button 5 times.

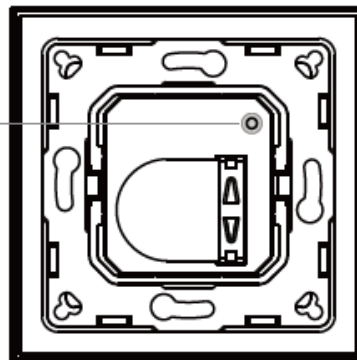

Step 2: From your zigbee controller or hub interface, choose to add device or accessory and enter Pairing mode as instructed by the controller.

Step 4: LED indicator flashes every 1 second, 20 seconds timeout if there is no network. Indicator will then blink 5 times quickly for successful pairing.


Note: 1) After pairing successfully, the remote information will appear on the controller or hub interface.
2) No remote information will appear on the hub interface if pairing to some Zigbee hubs.

4. TouchLink to a Zigbee Lighting Device

Step 1: Set the zigbee lighting device to start TouchLink commissioning, please refer to its manual to learn how.

Step 3: Short press ON button of group 1/2/3/4 to choose a group that you would like to pair the device to.

Step 4: Short press commissioning button 2 times to start TouchLink commissioning of the remote.

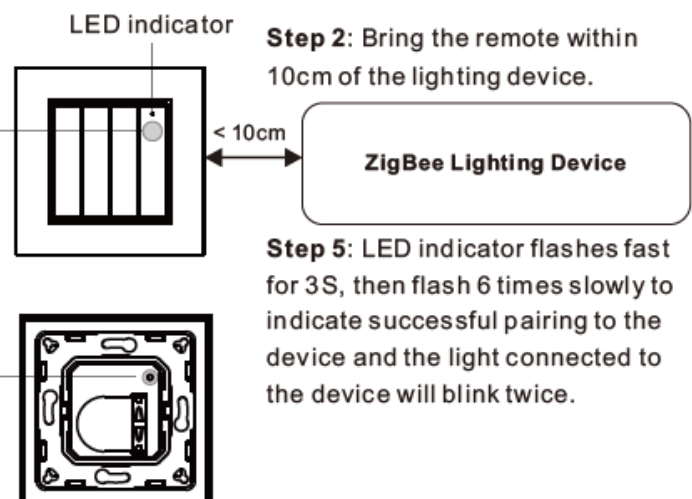


Step 2: Bring the remote within 10cm of the lighting device.

Step 5: LED indicator flashes fast for 3S, then flash 6 times slowly to indicate successful pairing to the device and the light connected to the device will blink twice.

Note: 1) Directly TouchLink (both not added to a ZigBee network), please first factory reset both the remote and device, each remote can link with max. 30 devices, please make sure the first linked device is always powered on when touchlink the remote with 2nd device and more devices.
2) TouchLink after both added to a ZigBee network, each device can link with max. 30 remotes.
3) To control by both remote and hub, add both remote and device to network first then TouchLink, after TouchLink, the device can be controlled by the linked remotes and Zigbee hub together.


Operation

5. Removed from a Zigbee Network through Coordinator or Hub Interface

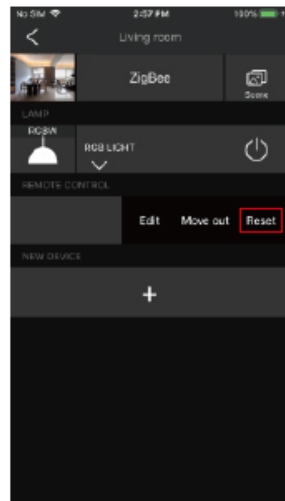

From your ZigBee controller or hub interface, choose to delete or reset the remote as instructed, indicator flashes 3 times quickly to indicate successful removing.

6. Factory Reset Manually

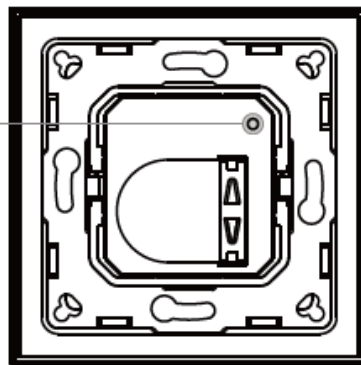

Step 1: Short press commissioning button 5 times continuously, indicator flashes 3 times quickly to indicate successful reset.


Note: All configuration parameters will be reset after the remote is reset or removed from the network.

7. Remove a Touchlink Paired ZigBee Lighting Device

Step 1: Set the Touchlink paired zigbee device to start TouchLink commissioning, please refer to its manual to learn how.

Step 3: Short press ON button of group 1/2/3/4 to choose the group that the device was touchlink paired to.


Step 4: Press and hold down commissioning button over 3S until LED indicator turns on.

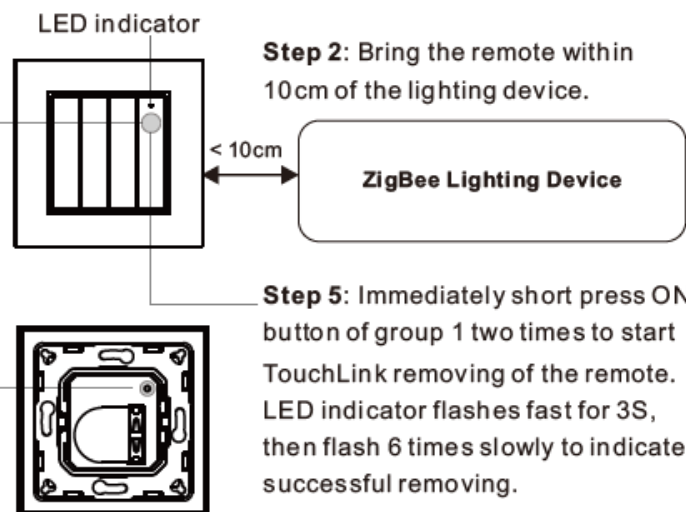

Operation


8. Factory Reset a Lighting Device (Touch Reset)

Note: the device shall be added to a network, the remote added to the same one or not added to any network.

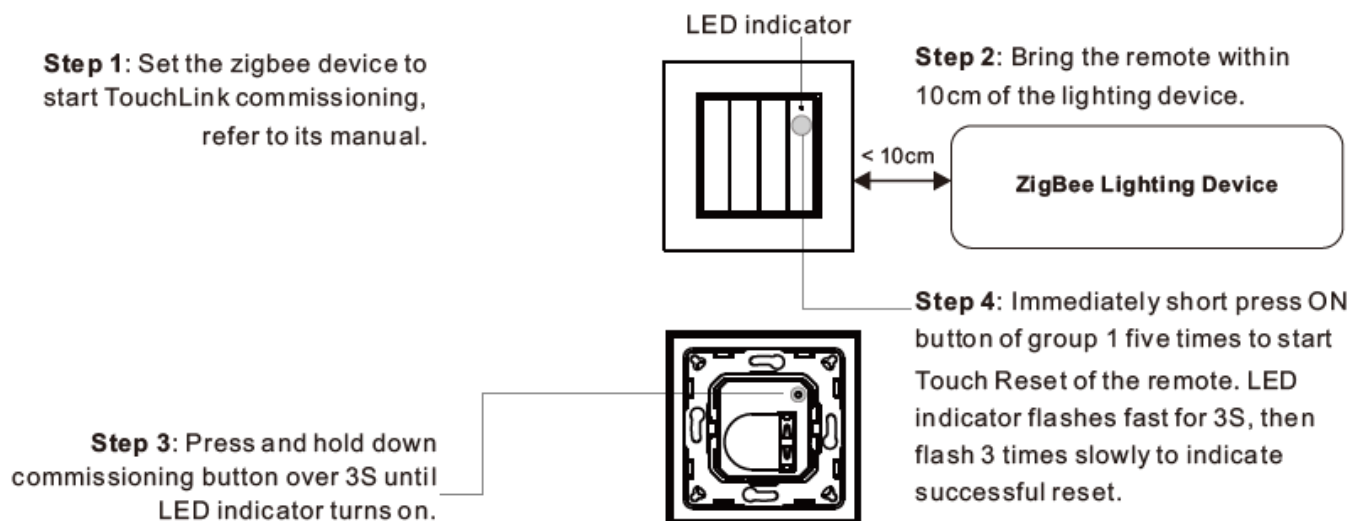

9. Find and Bind a Zigbee Lighting Device

Note: Make sure the device and remote already added to the same zigbee network.

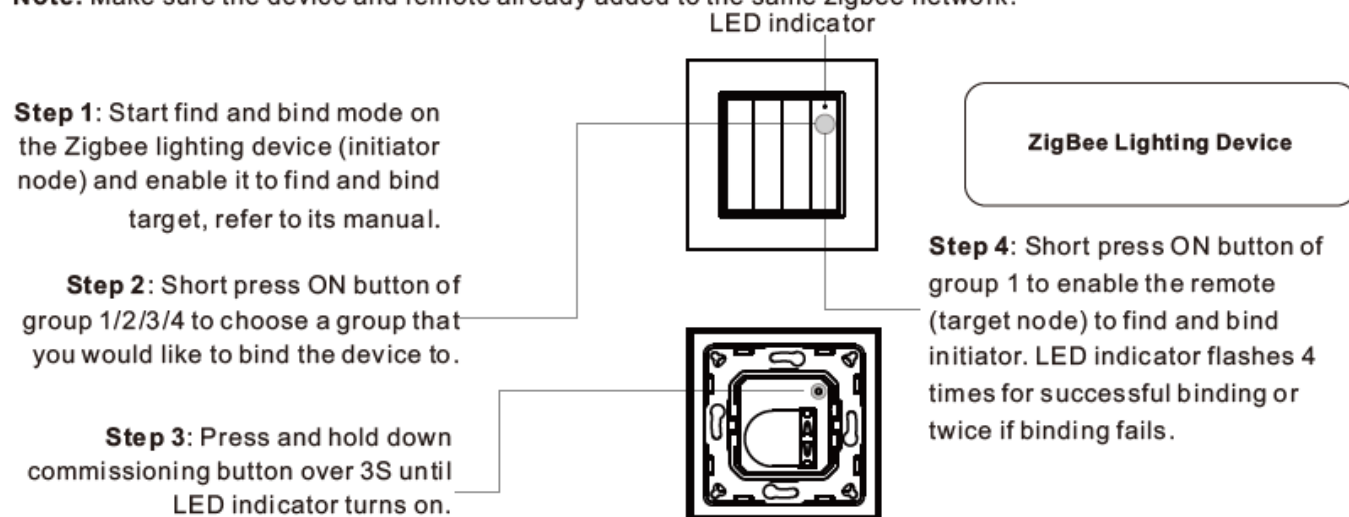

Note: Each remote can bind max. 30 lighting devices.

Operation


10. Find and Unbind a ZigBee Lighting Device

Step 1: Start find and bind mode on the Zigbee lighting device (initiator node) and enable it to find and bind target, refer to its manual.

Step 2: Short press ON button of group 1/2/3/4 to choose the group that the device already bound to.


Step 3: Press and hold down commissioning button over 3S until LED indicator turns on.

LED indicator

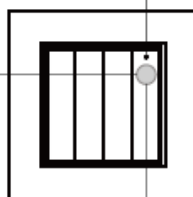

ZigBee Lighting Device

Step 4: Short press ON button of group 1 two times to enable the remote (target node) to find and unbind initiator. LED indicator flashes 4 times for successful unbinding or twice if unbinding

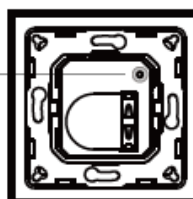


11. Clear All Find and Bind Mode Paired Lighting Devices


Step 1: Short press ON button of group 1/2/3/4 to choose the group that you would like to unbind all devices.

Step 2: Press and hold down commissioning button over 3S until LED indicator turns on.

LED indicator

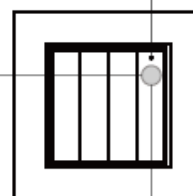

Step 3: Short press ON button of group 1 five times continuously to clear all bound lighting devices . LED indicator flashes 4 times for successful unbinding.

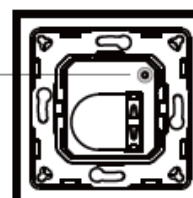


12. Setup a Network & Add Devices to the Network (No Coordinator or Hub Required)

Step 1: Factory reset the remote and the lighting device, refer to their manuals.


Step 4: Set another remote into network pairing mode and pair it to the network, refer to its manual.

LED indicator

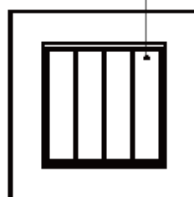

Step 2: TouchLink the remote and device to setup a network, refer to their manuals.

Step 3: Short press commissioning button four times to enable the network to discover and add devices, LED indicator will flash twice. 180 seconds timeout, repeat the operation.

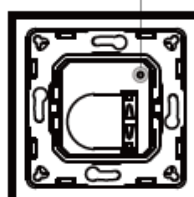

< 10cm

ZigBee Lighting Device

Step 5: Add more remotes to the network as you would like.

Step 6: Factory reset the lighting devices that you would like then add them to the network, refer to their manuals.

Step 7: Touchlink to pair the added remotes and lighting devices, refer to their manuals. Each remote can link with max. 30 lighting devices. Each lighting device can be linked by max. 30 remotes.

Operation

13. OTA

The remote supports firmware updating through OTA, and will acquire new firmware from zigbee controller or hub every 120 minutes automatically.

14. How to Check Whether the Remote Belongs to a Network or not

Short press any button, indicator blinking means the remote has already been added to a network, no blinking of indicator means the remote does not belong to any network.

15. Battery Power Monitor Function

The remote will report battery power value to the coordinator under following situations:

- When powered on.
- When operating the switch to send data packets (over 4 hours since last operation).
- When added to the network by a coordinator.




CAUTION

Risk of explosion if the battery is replaced by an incorrect type

- replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Operation

Installation

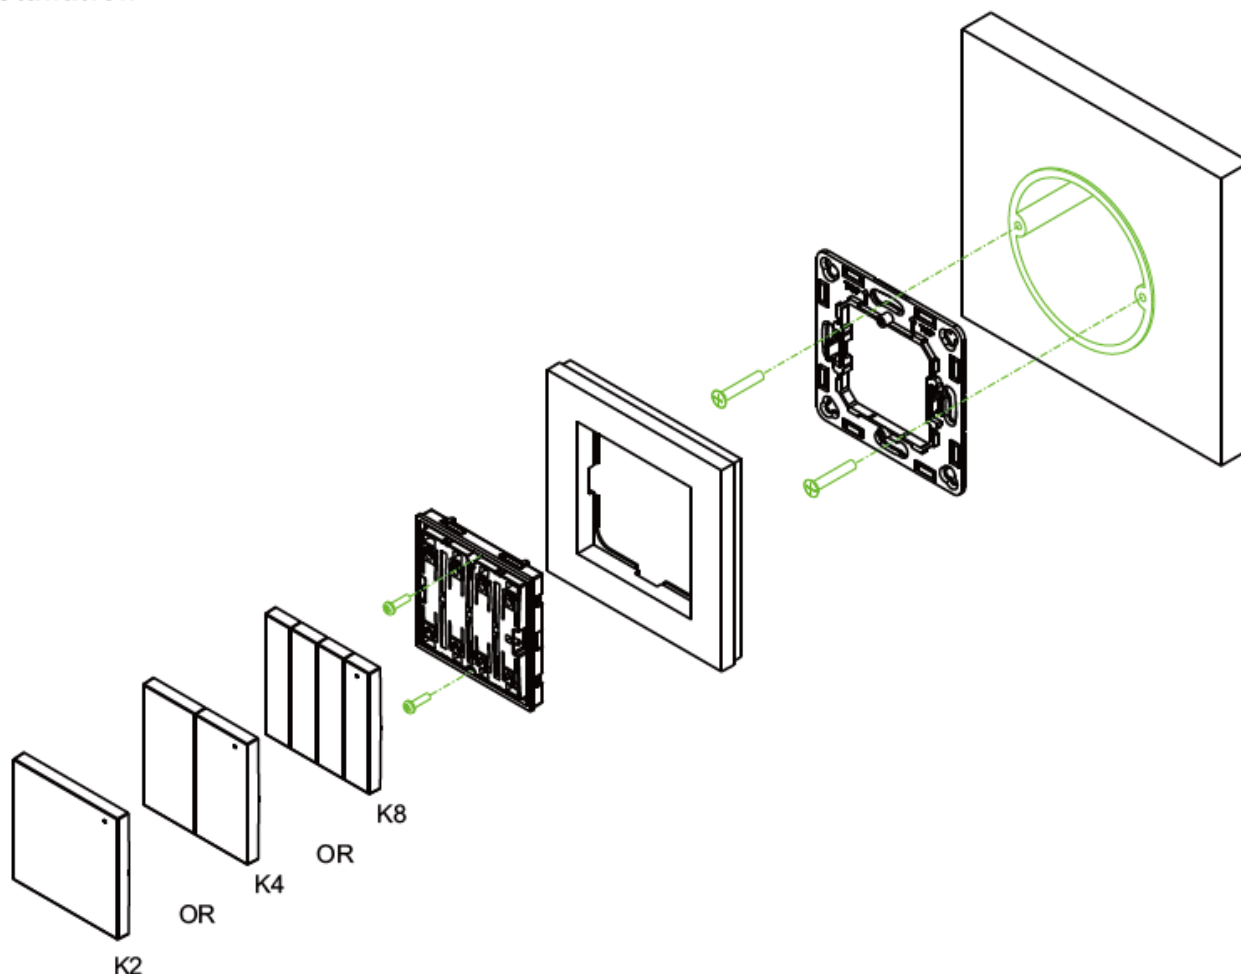

Mounting

The key part of this controller is an universal one, especially rotary standard switch element that can be integrated in numerous frames by different manufactures as below list:

BERKER	S1, B1, B3, B7 glass
GIRA	Standard55, E2, Event, Esprit
JUNG	A500, Aplus
MERTEN	M-smart, M-Arc, M-Plan